

1:60 SCALE CARDSTOCK MODEL KIT



SHOILEM MARAUDER

# MODEL COLOR SCHEMES


BLACK/RED (STANDARD)




BLACK/RED (ACE)



BLUE/YELLOW (STANDARD)

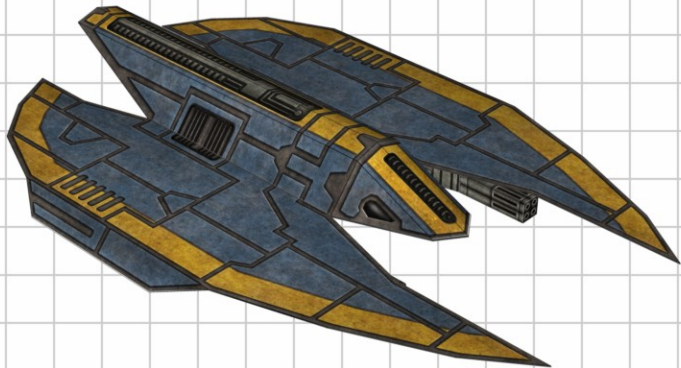


BLUE/YELLOW (ACE)

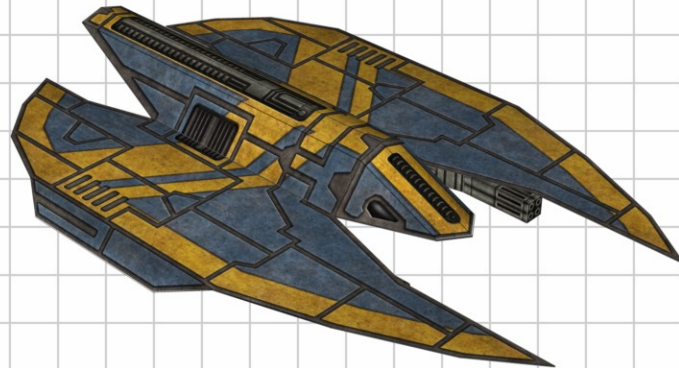


COLOR SCHEMES

# MODEL COLOR SCHEMES


GREEN/WHITE (STANDARD)

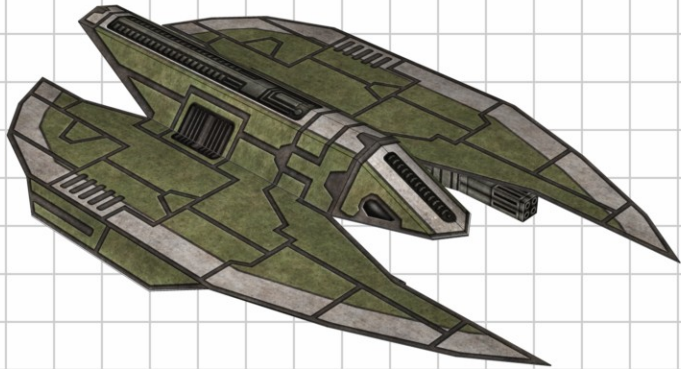


GREEN/WHITE (ACE)

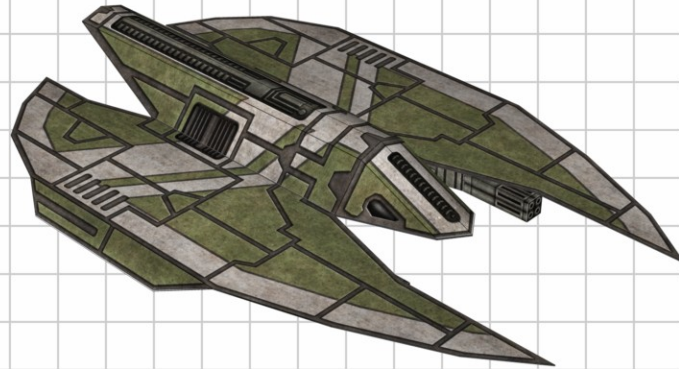

RED/GRAY (STANDARD)

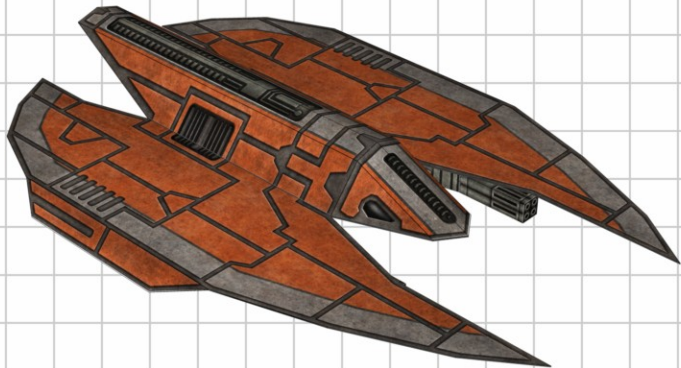


RED/GRAY (ACE)

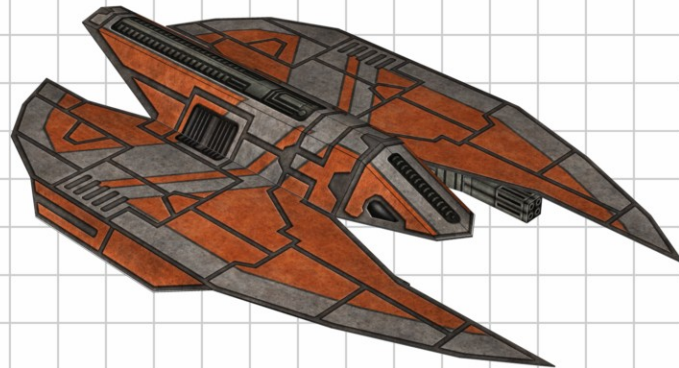


COLOR SCHEMES

# MODEL COLOR SCHEMES

SUBDUED (STANDARD)

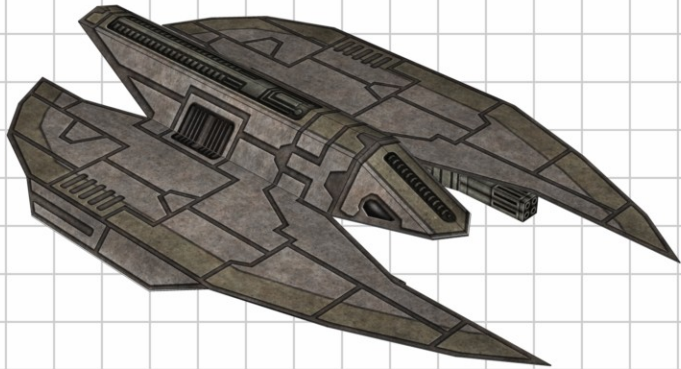


SUBDUED (ACE)

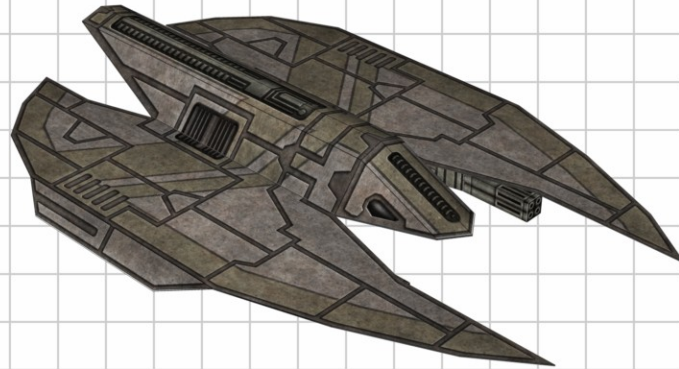

YELLOW/PURPLE (STANDARD)




YELLOW/PURPLE (ACE)

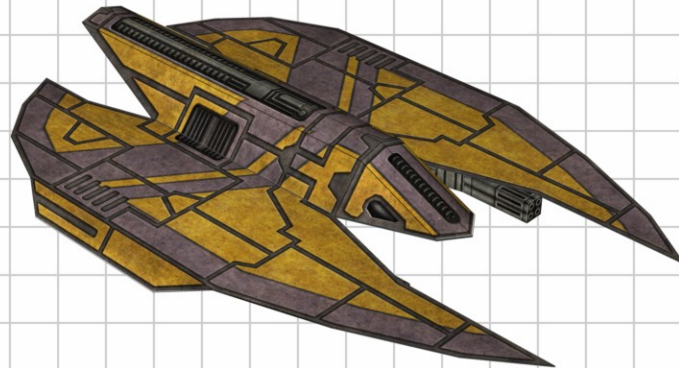

COLOR SCHEMES

# MODEL COLOR SCHEMES

RAW METAL

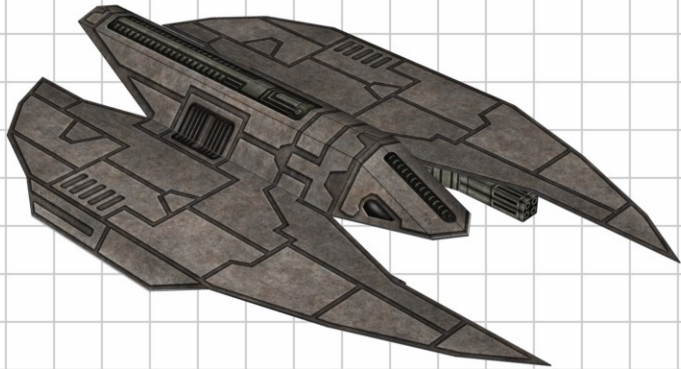

RED SCORPION



RED STRIPES




ORB SPIDER



COLOR SCHEMES


# ASSEMBLY INSTRUCTIONS

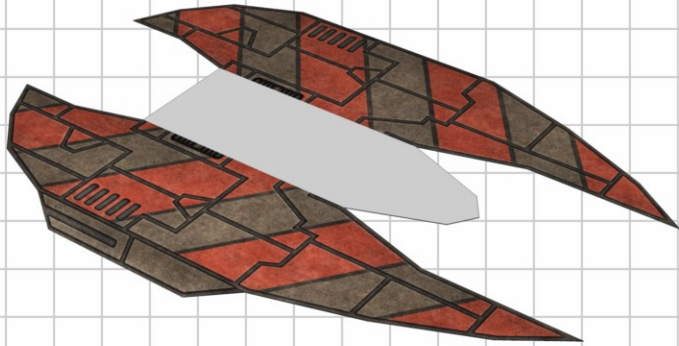

## WINGS

1. Cut out the upper wings, leaving a margin around the part. Glue the upper wings to a second layer of cardstock, then trim off the excess whitespace.

Make sure you score and pre-fold the wingtips as shown to the left.

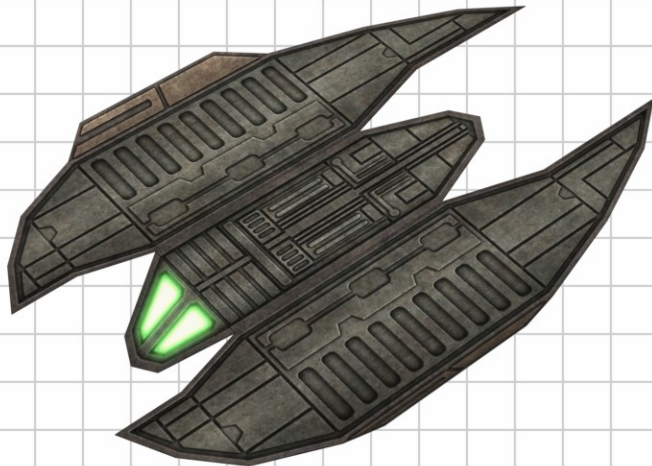


2. Repeat the same process for the lower wings. Make sure you also score and pre-fold the thruster panel as shown to the left, which will make the later steps easier.

# ASSEMBLY INSTRUCTIONS

## WINGS AND FUSELAGE

3. Glue the upper and lower wings together as shown to the left, and make sure the wingtips are angled downwards a bit.

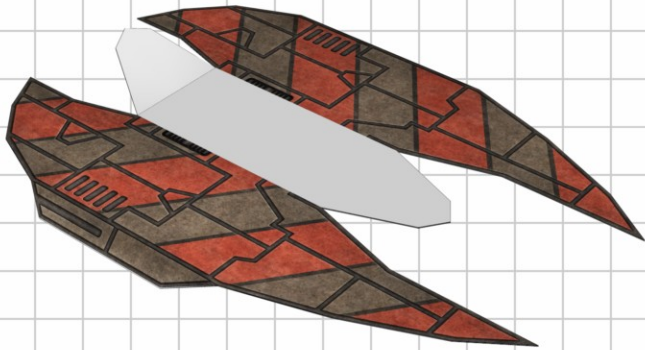


4. The fuselage is a half-cylindrical volume that is open on both sides. Score it and pre-fold it, but do not glue it together just yet.

5. Glue the rear edge of the nose to the glue tabs at the front of the colored portion of the fuselage.

6. Close off the bottom of the fuselage by gluing the bottom panel into place. The assembly should resemble the one shown to the left.




# ASSEMBLY INSTRUCTIONS

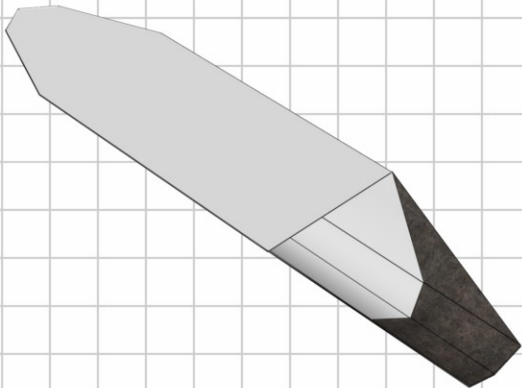


## FUSELAGE ASSEMBLY

5. Flip the fuselage over and glue the rear exhaust shroud to the underside of the open end as shown to the left.

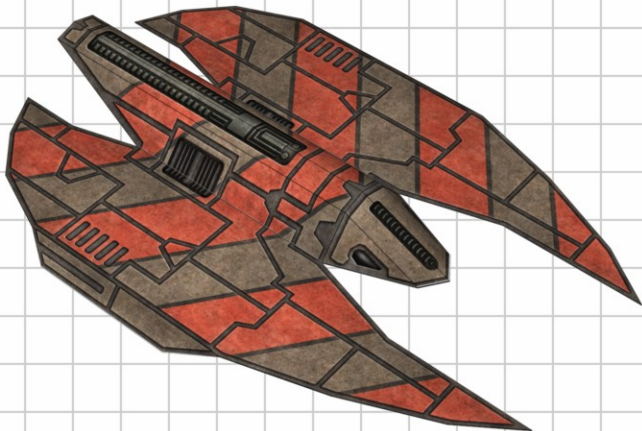


6. Glue the fuselage assembly to the top of the wing assembly as shown to the left..

# ASSEMBLY INSTRUCTIONS

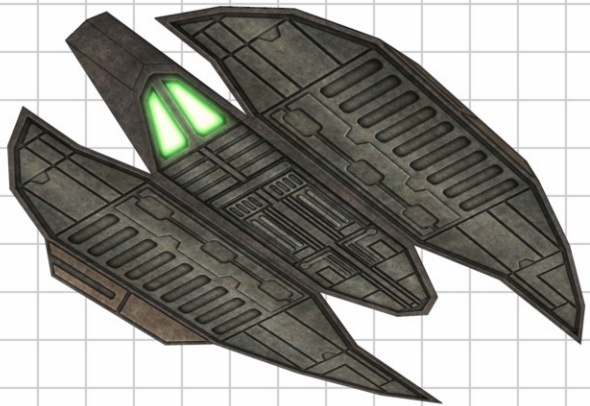


## FUSELAGE ASSEMBLY, CONTINUED

7. The final step is to apply a thin bead of glue directly along the front of the thruster shroud, then carefully fold up the thruster panel until it fits into place as shown to the left.

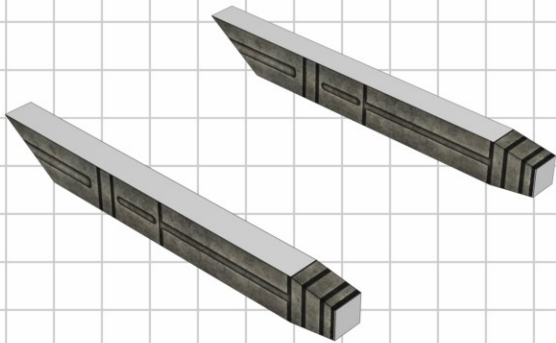


8. Fold up and glue the 2 gunpods as shown to the left.

# ASSEMBLY INSTRUCTIONS

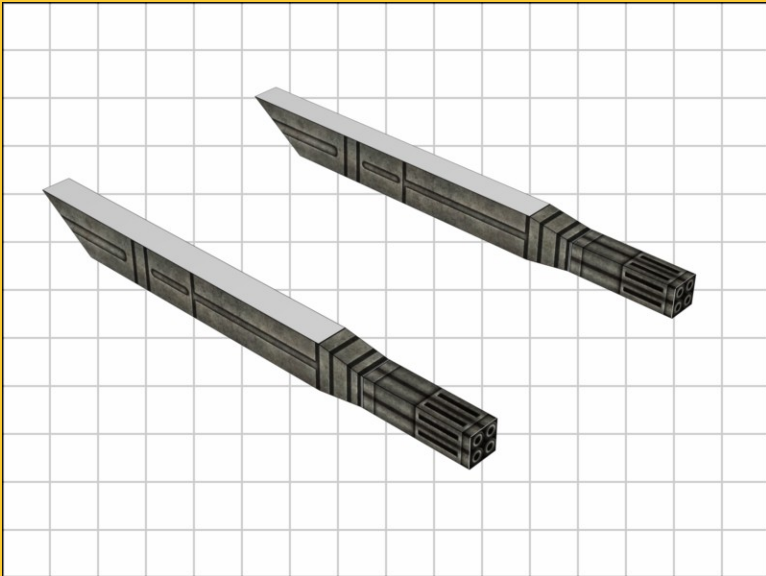


## GUN PODS

9. Fold up and glue the gunpod barrels to the gunpods as shown to the left.

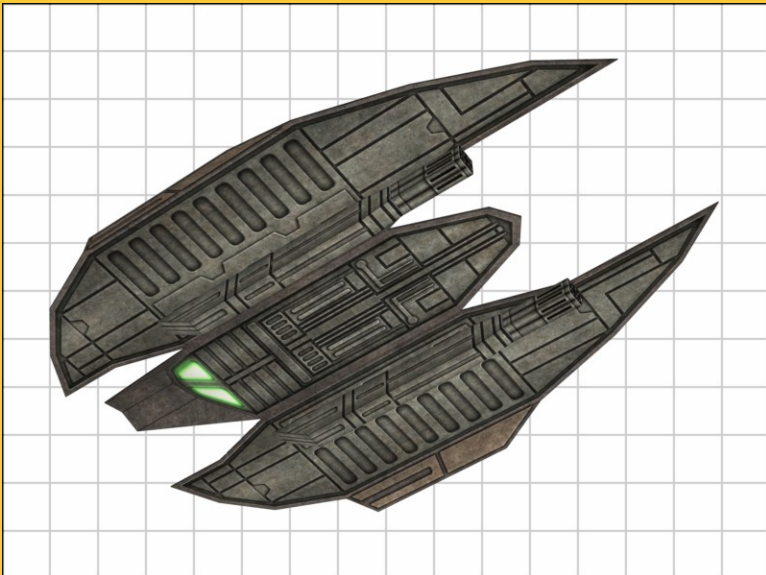


10. Glue each gunpod to the underside of the wings, as shown to the left.

# ASSEMBLY INSTRUCTIONS

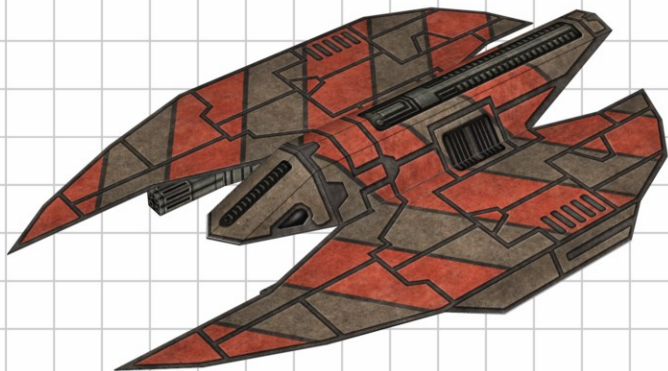

## FINISHED

The model is now complete.

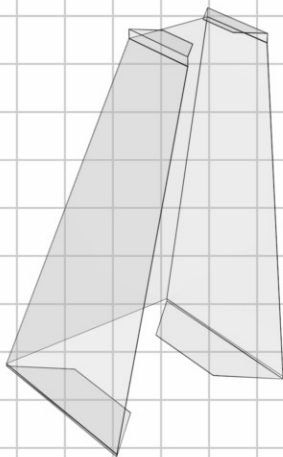


## THE SHADOW BASE

The shadow base stems should be printed on clear transparency sheets. Overhead projector sheets are cheaper than inkjet transparencies, and will work in a pinch.

1. Cut out the shadow base stem and fold it into the shape shown to the left.

# ASSEMBLY INSTRUCTIONS

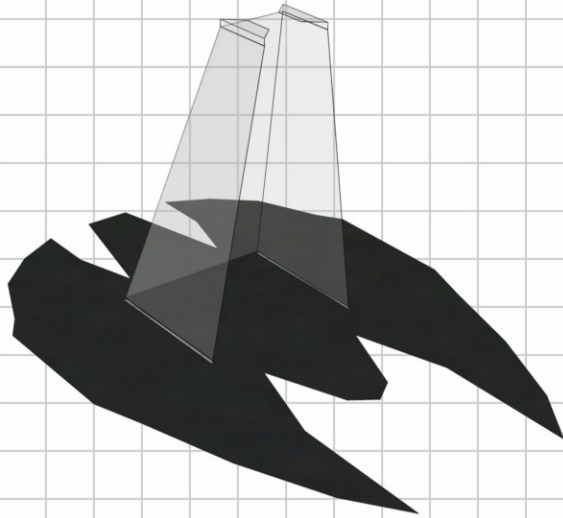


## THE SHADOW BASE, CONTINUED

The actual base itself should be printed on regular cardstock. The shaded half has two slots that need to be cut out first.


2. Insert the stem's bottom tabs into the slots on the shaded part of the base. Use a little dab of white glue to hold the tabs in place while you perform the next step.

3. Apply glue to the underside of the shaded part of the base, then press the bottom half of the base into place so that the stem tabs are sandwiched between both layers.

4. Burnish the layered base until the glue sets.

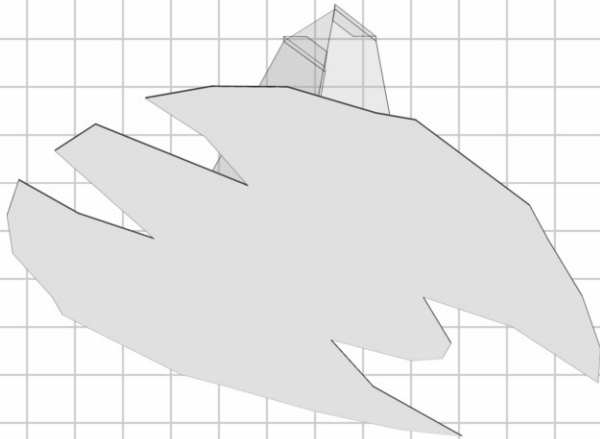

# ASSEMBLY INSTRUCTIONS

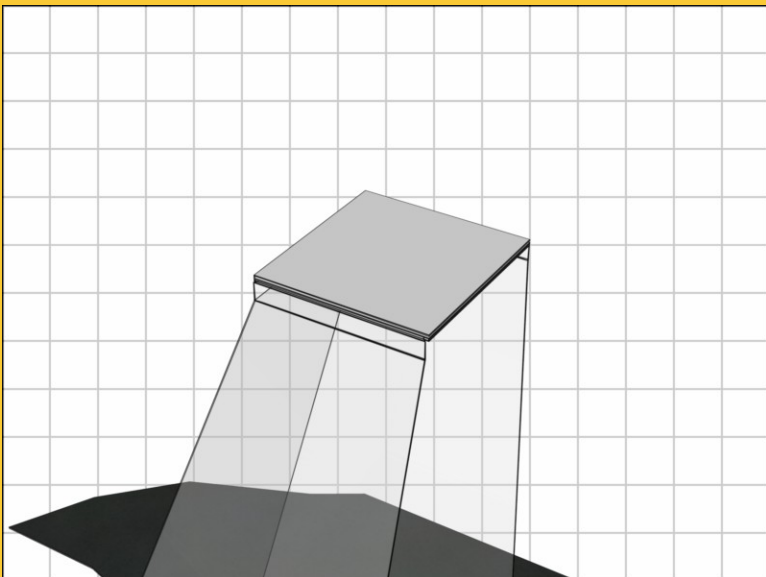

## FINAL ASSEMBLY

Transparency sheeting does not accept glue very well, so the interface that holds the model to the stem is a wraparound cardstock strip.

1. Do not use any glue in this step. First, fold the strip over onto itself until it resembles the shape shown to the left. The shaded portion of the completed strip is the bottom.

2. Lift up the **topmost** flap of the folded strip. Apply glue only to the portion exposed when this flap is lifted. Press the strip together until the glue sets.

3. Insert the top tabs of the base stem into the open, unglued sides of the folded strip, as shown to the left.

4. Glue the model to the base as shown to the left.

The model is now based.

